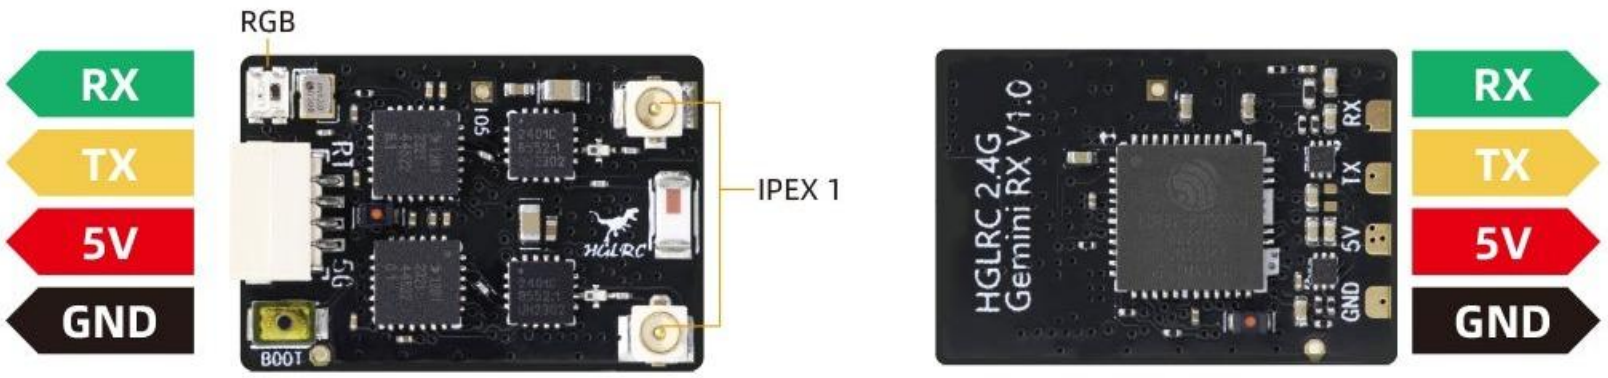
# — Interface definition —

## HGLRC ELRS 915Mhz GEMINI RX
## Dual receiving interface definition diagram



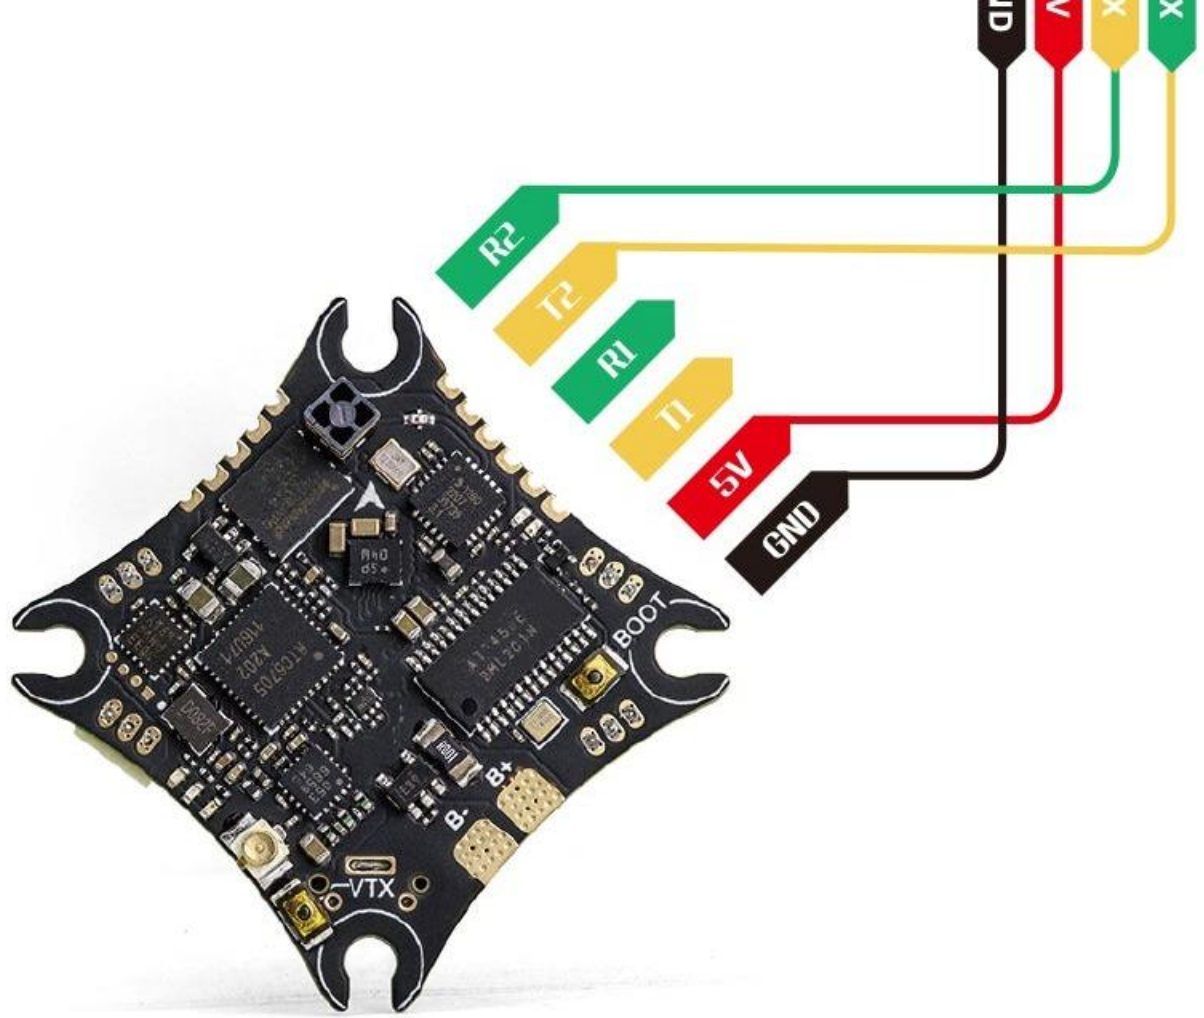

## HGLRC ELRS 2.4Ghz GEMINI RX
## Dual receiving interface definition diagram




*When the receiver is powered on normally and is not connected to the remote control or TX Module, short press/press the BOOT button for more than 6 seconds, the receiver will restore to factory settings.

# — Wiring diagram —




R2
T2
R1
T1
5V
GND
BOOT
B+
B-
VTX




GND
5V
TX2
RX2
GND
5V
RX2
TX2


SPECTER
HGLRC
G
5V
R2
T2
10V
G
T1
R1
G
R2
VTX
10V
G
CAM
B-
LED
5V
G
10V
GND
CAM
BB-
LED
5V
GND


10V
GND
TX1
RX1
GND
RX2
VTX